# GUIDANCE LIGHTBAR

## QUICK START INSTRUCTIONS

**KIT CONNECTION.**

Check the user manual VISION DPB or VISION WPB, chapter “information and Ports setup”

Integrated guidance bar
Power button
USB port with rubber cover
Backlit touch screen

The following instructions are provided to enable you to quickly start using this equipment via the two main menus:

- **ACCUEIL (HOME)**
- **CONFIGURATION**

**ALSO REFER TO THE MANUFACTURER'S INSTRUCTION MANUAL.**

➪ Switch on the console.

## CONFIGURATION

## VEHICLE SETTINGS

➪ Use and to adjust the settings.

➪ Press to go back to the Configuration menu.

## TOOL SETTINGS

- Use and to adjust the settings.
- Press to go to the next settings.
- Press to go to the next Configuration menu.

## ACCUEIL (HOME)

- Press and select the tasks in the order indicated.

# SPREADING SETTINGS

- Select the status bar
- Select the guidance mode

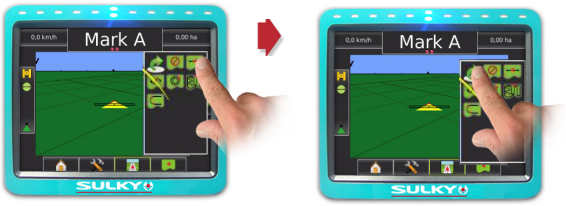


- Ideally, select the straight line guidance mode .
- Press to go back to the status bar.

- Check the status of
  auto mode enabled.
  auto mode disabled.
- Switch between modes by pressing

# SPREADING

➪ Enable the field outline

➪ Start spreading around the edge of the field.

➪ While spreading in a straight line, place point A

Point B will remain disabled until you have travelled 40 m

Point B is now enabled

➪ Place point B

➪ The guidance line appears

➪ Outline completed.

➪ Save the surface area to be treated.

# SPREADING (CONTINUED)

➪ Continue spreading, following the LEDs on the guidance bar.

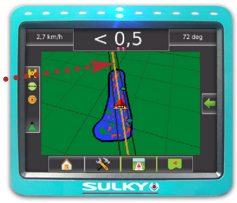


➪ Once you have finished spreading, press


Save your work

Retrieve your saved tasks in the **CONFIGURATION** settings


➪ Press then “Job Data”.

➪ To transfer your data onto a USB stick, select the job then use the arrows to move it onto the USB stick